

RESTRICTIONS

Due to hands-free auto-voice actuation system, smooth voice switching may be hindered by voice strength of the opponent or ambient noise, etc.
 When system has two Sub master stations (JF-2HD or JF-2SD) installed, put the terminating switch to OFF position on the middle of Sub master station.


JF-2SD shall meet with RESTRICTIONS ON WIRING of JF-2MED Master station.

FUNCTIONS

- Calling door station (Call stand-by: approx. 45 sec., DOOR call-in LED is lit in red calling from door 1 or in green calling from door 2)
- Hands-free auto-voice actuation communication, approx. 1 min. timed
- Transmit LED is steadily lit in red while speaking
- Press-to-talk communication, after depressing TALK button 1 sec. or more
- All-Call the inside stations (Master & Sub-master). (approx. 10 min.)
- Activating door strike at a communicating door station (Door release button is steadily lit)
- Instant voice call: Instant-on audio, upon called from door station (approx. 45 seconds)
- External sensor input: When external sensor activates, notified by notification sounds and flashing Transmit LED (door station 1 also sounds by setting of master station)
- Reset notification by pressing CALL button or sounds stop automatically after 30 sec. by setting of master station
- Transfer entrance call to other inside station

SETTING

- Adjust Receive volume (HIGH - LOW) RCV. (receive) volume control (Instant voice call is also adjusted)
- Adjust Call tone volume (HIGH - OFF) TONE (call tone) volume control (Notification sounds is also adjusted)
- Select door call-in
- DOOR 1 (ON or OFF) SET switch 1
- DOOR 2 (ON or OFF) SET switch 2
- Terminating switch (ON or OFF) SET switch 5

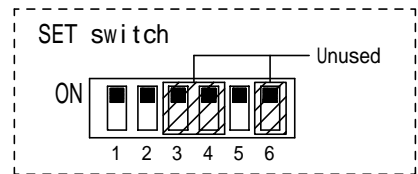

DESCRIPTION SUB MASTER STATION	FIG. NAME WIRING/RESTRIC./FUNC./SETTING	UNIT mm	DATE 9 October, 2006
MODEL NO. JF-2SD	FIG.NO. 50771-2-2	PAGE 2/2	REVISION 1

AIPHONE