 




## WIRING DIAGRAM



 
## IMAGE VIEW AREA & MOUNTING HEIGHT

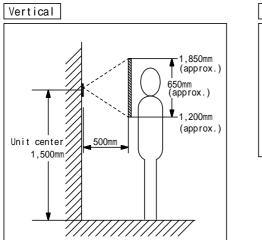

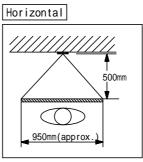

## RESTRICTIONS


Do not cover the water escape holes with caulking seals. JF-DV door station is exclusively used with JF & JB Series Master stations. Avoid to install JF-DV in the following locations;



At the Entrance where background is sky in upper floors of Condominiums, etc.

WHITE WALL

 The background of the standing caller's is white wall.



Where the standing location is strongly sunlit.

## FUNCTIONS

Initiating a call to and entering communication with Master station White light LED turns on in low-light conditions Directory card is backlit constantly

DESCRIPTION	(Color,	FIG. NAME		UNIT	DATE
VIDEO DOOR STATION	Vandal-resistant)	WIRING/IMAGE/REST	R./FCN.	mm	2 October, 2006
MODEL NO.		FIG.NO.	PAGE	REVISION	AIRHANP
JF-DV		50793-2-2	2/2	1	AIPHONE