



# Multi-Tenant Audio Entry Security

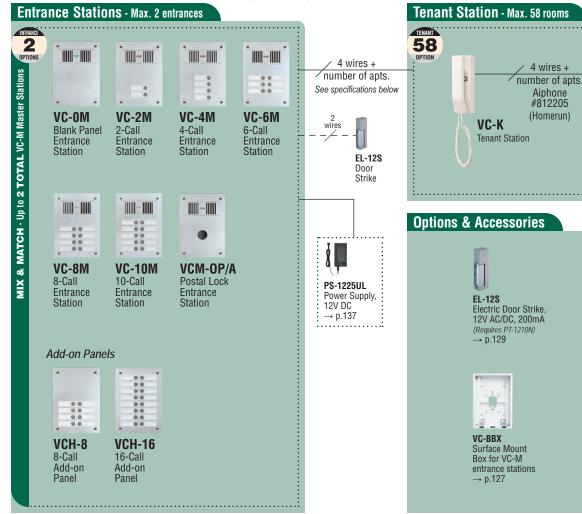

### **Features**

- One or two handset room stations per apartment
- · Door release from tenant station
- Single entry panel in 0, 2, 4, 6, 8, and 10-call sizes
- Add-on panels in 8 and 16-call sizes (VCH-8, VCH-16)
- Dual entrance station with VC-MW/B
- Backlit directory at entrance panel
- Activate external buzzer at room station (with RY-PA)
- Surface mount box for single VC-M or VCH panel

 
#### **Unit Dimensions**



| Front panel     |         |         |       | Built-in box |        |          |
|-----------------|---------|---------|-------|--------------|--------|----------|
|                 | Н       | W       | D     | Н            | W      | D        |
| VC-M, VCH panel | 10-1/4" | 7-5/16" | 5/64" | 9-1/16"      | 6-1/8" | 2-11/16" |
| VC-BBX          | -       | -       | -     | 10-3/8"      | 7-1/2" | 2-1/16"  |

NOTE: Multiple box mounting - keep a distance of 7-5/16" between two box centers

# Wiring

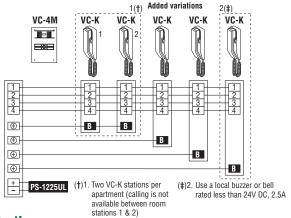

### **Specifications**

Power Source 12V DC, 80mA (intercom), 100mA (lamp) - Use PS-1225UL

Communication Electronic buzzer rings VC-K station(s), frequency is approx. 600Hz, pick up (either) handset too reply

Wiring Door to master: 5-cond., non-shielded

Between masters (6 looped): 10-cond., non-shielded Between masters (12 looped): 16-cond., non-shielded

Distance Door to master: 1,100'(22AWG) 2,500'(18AWG)

Wire Type Door to room station or tenant station: Aiphone #812205
Between room station or tenant station (6 looped): #812210
Between room station or tenant station (12 looped): #812216



VC-K

Door

Relay  $\rightarrow$  p.129

Release

VC-MW/B

**Dual Entrance** 

Station Adaptor

Tenant Station