


VTM106+Flush mounted box



Installation

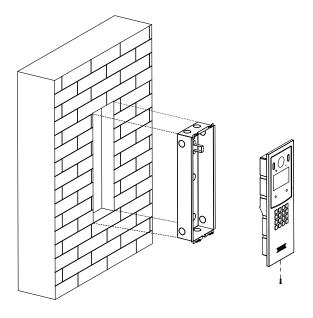

- **Step 1** Cut an opening with the size of the mounting box in the wall.
- **Step 2** Pull the reserved cables through the cable hole in the mounting box.
- **Step 3** Fix the mounting box in the wall with cement or screws.
- **Step 4** Connect the cables to the ports on the VTO rear panel.
- **Step 5** Fix the VTO in the mounting box with the screws.
- **Step 6** Put sealant between the VTO, mounting box, and the wall.

Material: SPCC t=0.8, powdered metal surface (Black DH920C2)
Dimensions: 397.1mm×146.0mm×64.0mm (15.65"×5.75"×2.52")
Wall Opening Dimensions: >379.6mm×128.0mm×64.0 mm(14.96"×5.04"×2.52"), <397.1mm×146.0mm×64.0mm (15.65"×5.75"×2.52")

Dimensions (mm[inch])

