



PIR Cam support is under development
Wireless PIR Cam Expander will also support wireless detectors, sounders, keypads and keyfobs



Fast Bus for Wireless PIR Cam

Plug-in PSTN Modem
RP512MD2400A



Plug-on IP Modules
RP512IPWV00A Multi Channel+ WiFi+ PIR Cam
RP512IPW000A Multi Channel+ WiFi
RP512IP0000A Multi Channel IP
RW132IP0000A Single Channel IP



Plug-in 3G/2G Modules
RP512G30000A 3G/GSM
RP512G20000A 2G/GSM
RP432GSM000A GSM/GPRS



RISCO Cloud Server



Monitoring Stations



Configuration Software



SynopSYS™ Security Management Software



www.riscocloud.com web interface



App Store Play Store RISCO



- 4 independent RS485 Main Bus lines
- Up to 32 Bus devices per Bus line: Keypads, Expanders, Bus Detectors & Sounders
- 300m max. length for each Bus line with standard alarm cable
- 1000m max. length for each Bus line with shielded twisted pair Cat. 5 cable, and on condition Bus Test result is above 97%

Long Range Radio Transmitter



4 Main Bus Lines




Listen-in & Speak Module
RW132EVL000A x4

4 x 3A Relay Output Expander
RP296E04000A



x32 per system
x8 per Bus

16 Zone Expander
RP512EZ1600A



x35 per system
x32 per Bus

8 Zone Expander
RP432EZ0800A



x32 per system
x8 per Bus

8 x 100mA O.C. Output Expander
RP296E08000A



x32 per system
x8 per Bus

1.5A Power Supply
RP296EPS PCB
RP296EPSP00A Boxed, EU



x32 per system
x8 per Bus

3A Power Supply
RP128EPS000A PCB
RP128PSPSEUA Boxed, EU



x32 per system
x8 per Bus

Elegant Keypads

RPKELW0000A
RPKELPW0000A with prox
RPKELB0000A black
RPKELPW0000A black with prox



x48 per system
x32 per Bus

Touchscreen Keypads


RP128KP0200A
RP128KPP200A with prox



x48 per system
x16 per Bus

ProSYS Keypads

RP128KCL0ICA
RP128KCLPICA with prox

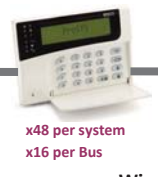

x48 per system
x16 per Bus

LightSYS Keypads


RP432KP0000A
RP432KPP000A with prox



x48 per system
x16 per Bus

Wireless Expander

RP432EW8000A



x16 per system
x8 per Bus

Bus Zone Expander

RP128ZB000B
Acts as Bus Isolator and Bus detector concentrator



x32 per system
x8 per Bus

WatchOUT

WatchOUT NG

Industrial Lunar

BWare Bus

Seismic Detector



Detector Bus Lines

Up to 512 Bus Detectors per system
Up to 32 per Bus Zone Expander, or directly on main panel per Bus, with shielded twisted pair Cat. 5 cable
Up to 20 Bus Detectors recommended per Bus Zone Expander or main panel Bus, for better performance with regular alarm cable, and for higher security

ProSound



Lumin8



x32 sounders per system
x8 per Bus

Wireless Sounders
x32 wireless sounders per system
x3 per Wireless Expander

2-Way Wireless Slim Keypads
x32 wireless keypads per system
x2 per Wireless Expander

Wireless BWare DT

Wireless Curtain PIR

Wireless Door/Window Contacts

WL Smoke & Heat Detector

2-Way Keyfob
x256 Rolling Code Keyfobs per system
x16 per Wireless Expander

1-Way Keyfob

Wireless CO & Gas Detectors

Wireless Flood Detector

Panic Keyfob

Wristband Panic
x256 Zone/Panic Keyfobs per system
x32 per Wireless Expander

x256 wireless detectors per system
x32 per Wireless Expander